

Sony np-fm50



1371112291.jpg



??????? : 7,2 ?, 8,5 ?????-???, 1180 ??-??? ?????? STAMINA ? ?????????? ?????? ?????? ? 1,7 ??? ?????? ??????? ?? ????????? ?
????????????? ?????????? ????????? (NP-FM30) ??????-????? ??????? ?? "?????? ??????" ??????, ??????????, ??????????????????
????????????? ...

??????? : ??? ????????

????:

????????????? ???:

????????? ??? ? ???:

???? ? ? ??????:

???? ? ? ??????:

???? : 607,48 ?.

???? ? ? ?????? : 607,48 ?.

?????:

????? ??????:

[??????? ?????? ?? ????? ??????](#)

????????

??????? : 7,2 ?, 8,5 ?????-???, 1180 ??-???

??????? STAMINA ? ?????????? ?????? ??????

? 1,7 ??? ?????? ??????? ?? ?????????? ? ?????????????? ?????????? (NP-FM30)

???????-????? ??????? ?? "?????? ??????"

??????, ??????????, ?????????????????? ????????????

???? ? ?????? ??? ? ?????????? ??????????????, ?????? ?????????????? ?????????? ?????? ?????? ? ?????????? ?? ??????.

????????????? ?????????? Sony

????????????? ?????? : ?????????? ?????????? ??????, ?????? ? ??????

????????? Sony ?????????????? ?????????????? ?????? ?????? InfoLITHIUM ? ?????????, ?? ??????? ?????????? ?????? InfoLITHIUM

?????????????: ????????????? Sony HDR-UX7E, HDR-UX5E, HDR-UX3E, HDR-1E, HDR-HC7E, HDR-HC5E, DCR-DVD508E, DCR-DVD506E,
DCR-DVD408E, DCR-DVD406E, DCR-DVD109E, DCR-DVD108E, DCR-DVD106E, DCR-SR200E, DCR-SR190E, DCR-SR82E, DCR-SR72E,
DCR-SR62E, DCR-SR52E, DCR-SR42E, DCR-SR32E, DCR-HC96E, DCR-HC48E, DCR-HC47E, DCR-HC45E, DCR-HC96E, DCR-HC38E,
DCR-HC37E, DCR-HC28E, DCR-HC27E. DSC-F717/ F828/Sony DSC-F707, Sony DSC-F717, Sony DSC-F77, Sony DSC-F828, Sony DSC-R1,
Sony DSC-S30, Sony DSC-S50, Sony DSC-S70, Sony DSC-S75, Sony DSC-S85, Sony Mavica CD200, Sony Mavica CD250, Sony Mavica
CD300, Sony Mavica CD350, Sony Mavica CD400

???

??????? (???)

????????????? ?????????? (V)

????????????????? ??????????

?????????????????

Li-Ion

1180

7,2

??????? STAMINA ? ?????????? ?????? ??????

SONY - <http://www.sony.ru>

?????
?? ??????? ?? ??? ??????.